



酒店袖珍型 IP 话机 HS108v2 快速操作指南

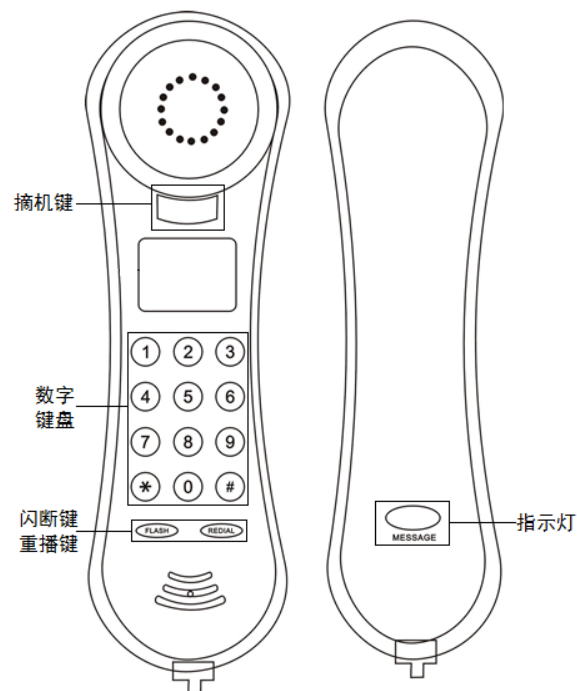

指示灯


LED 灯状态	描述
红色闪烁	对应线路保持或有来电正在呼入
红色常亮	对应线路摘机且正在进入正常通话状态
灭灯	待机状态

安装指引

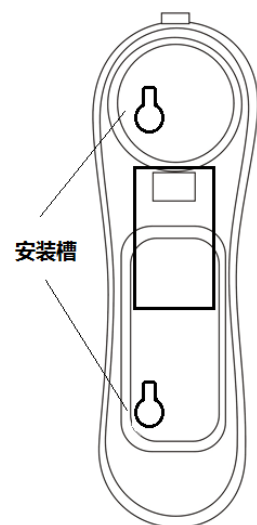

1-1

网络链接

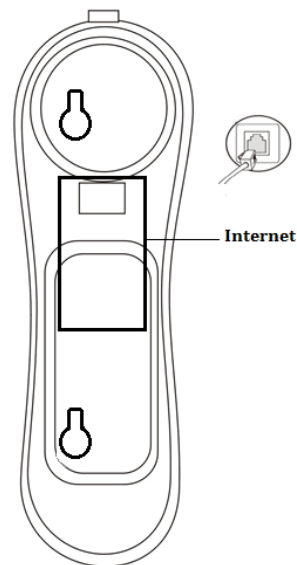

网络设置

在 **WEB>网络>本地网口配置** 下，可快速设置 LAN 网口及 PC 口的相关信息：

LAN： 网络类型/IP/子网掩码/网关/DNS1 & DNS2/web 端口/telnet 端口。

快速注册

在 **WEB 设置>账号 SIP 设置**，分别配置下列主要参数：

a)是否启用账号* b)账号类型 c)账号* d)密码* e)主 SIP 域名*

设置好以上参数后，按**提交键**即可完成 SIP 帐户的添加；

发出呼叫

- **摘机：** 提起手柄或按**摘机键**，输入需要拨出的号码，然后按**#键**；
- **直接呼叫：** 直接拨打号码，然后按**#键**；
- **重拨：** 按**重拨键**以拨打最近一个拨出的号码；

1-2

闪断键

闪断功能

- 通话中按一下，原通话被保持，进入转接状态，话机听拨号音
- 转接状态未拨号并按一次，取消转接功能，原通话继续被保持，话机听保持音
- 保持状态下按一次，则恢复保持中的通话

音量调节

话机状态	对应所调节音量
待机状态	振铃铃声音量
手柄摘机状态	手柄听筒音量

- 您可以通过以下方式对应调节列表中的音量：
 - a) **网页设置：** 进入 web 页面，选择菜单“声音调节”；

*更多的详细内容请参考本话机的用户手册。您也可以通过访问话机的 **Web 页面**来进行更详细的参数配置。


配件清单

列表	数量
话机	1
网线	1
快速操作指南	1



广州市亿景通信技术有限公司
地址：广州市天河区东圃镇黄村路 51 号粤安工业园 C 栋 4 楼
网址：http://www.escene.cn
客户服务：400 090 5818


Hotel Compact Type IP Phone HS108v2 Quick Operator Guide

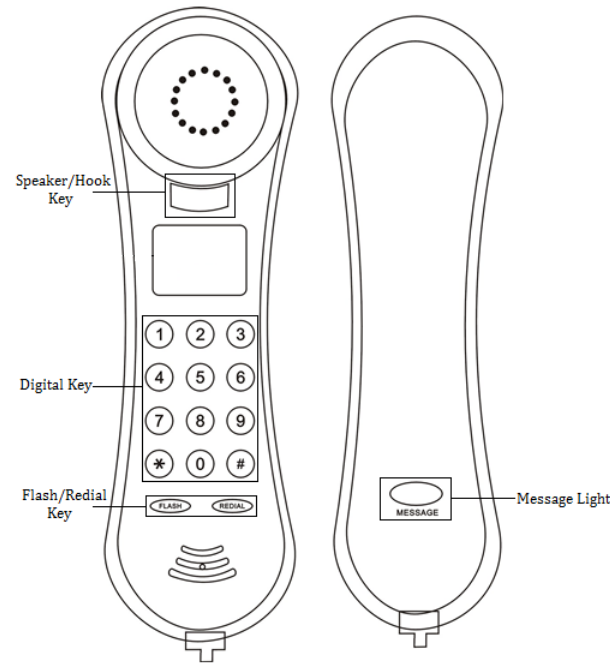

Message Light


LED Status	Description
Red, flashing	There is an incoming call or call on hold.
Red, steady	Pick up and enter normal call.
Lighting-off	Free

Mounting Bracket

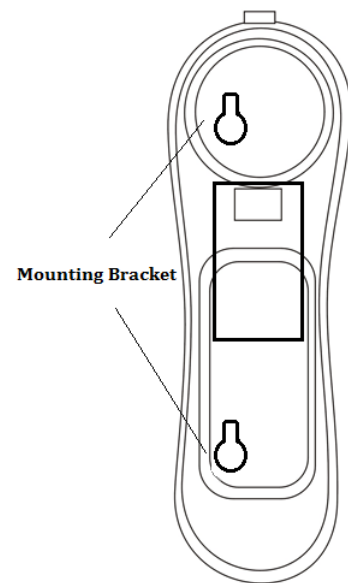

2-1

Network Connection

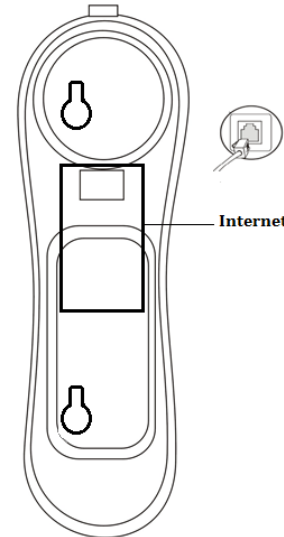

Network Setting

If you want to set of network information, Pls login into WEB>Network
LAN Port: Type/IP/Mask/GW/DNS1or2/Web Port/Telnet Port

Register

Login into WEB> SIP account Setting,
As the following options is main functions .
a)Enable account* b)Account Mode c)User Name* d)user pwd*
e)SIP1*
When you finished above setting, your account will be work now.

Placing a Call

- **Speaker:** Press **Speaker** button and dial number directly, then press # button to dial.
- **Dial directly:** Dial number directly, then press # button to dial
- **Redial:** Press **Redial** button/soft-key to dial the latest number;

2-2

Flash Key

Flash keys function:

- During a call, press the flash key to enter the transferred pattern with dial tone. The call will be holding.
- When transferring the dialing, pressing the flash key can cancel the transferred function. The call still be holding.
- Pressing the flash key can recover the on holding call

Volume Adjustment

Phone Status	Corresponding volume
Standby	Ring volume
Hook off	Handset volume

You can adjust the corresponding input volume as follow:

- Web Set: Enter website >select "Volume setting".

*For details, you can refer to the corresponding User Manual.

Summary

List	Count
Phone	1
Cable	1
Quick Operator Guide	1



ESCENE COMMUNICATION CO.,LTD.

Web: <http://www.escene.cn/en>

Address: Floor 4 Building C YueAn Industrial Park No.51 Huangcun Road
Tianhe District Guangzhou China

2-3